SAMSUNG

English / 简体中文 / 繁體中文

Bluetooth®

STEREO HEADSET

SBH650

MOBILE ENHANCEMENT

English 1
简体中文 19
繁體中文 39

Contents

Getting started

Your headset overview 3
Button functions 4
Charging the headset 5
Wearing on the headset 6

Using your headset

Turning the headset on or off 7
Pairing with your Bluetooth phone 7
Using call functions 8
Using music control functions 11
Answering a call while listening to music 12
Connecting the headset with other devices 13

Appendix

Frequently asked questions 14
Warranty and parts replacement 16
Correct disposal of this product 17
Specifications 18

Take the time to read through this user's guide before you start to use SBH650 Bluetooth Headset.

Bluetooth® is a registered trademark of the Bluetooth SIG, Inc. worldwide—Bluetooth QD ID: B014028

More information about Bluetooth is available at www.bluetooth.com.

Safety precautions

- Never disassemble or modify your headset for any reason. Doing this may cause the headset to malfunction or become combustible. Bring the headset to an authorised service centre to repair it or replace the battery.
- When using your headset while driving, follow local regulations in the country or region you are in.
- Avoid storage at high temperatures (above 50° C/122° F), such as in a hot vehicle or in direct sunlight, as this can damage performance and reduce battery life.
- Do not expose the headset or any of its supplied parts to rain or other liquids.

At very high volumes, prolonged listening to the headset can damage your hearing.

Getting started

This section explains what to remember for the proper use of your Bluetooth headset.

Your headset overview

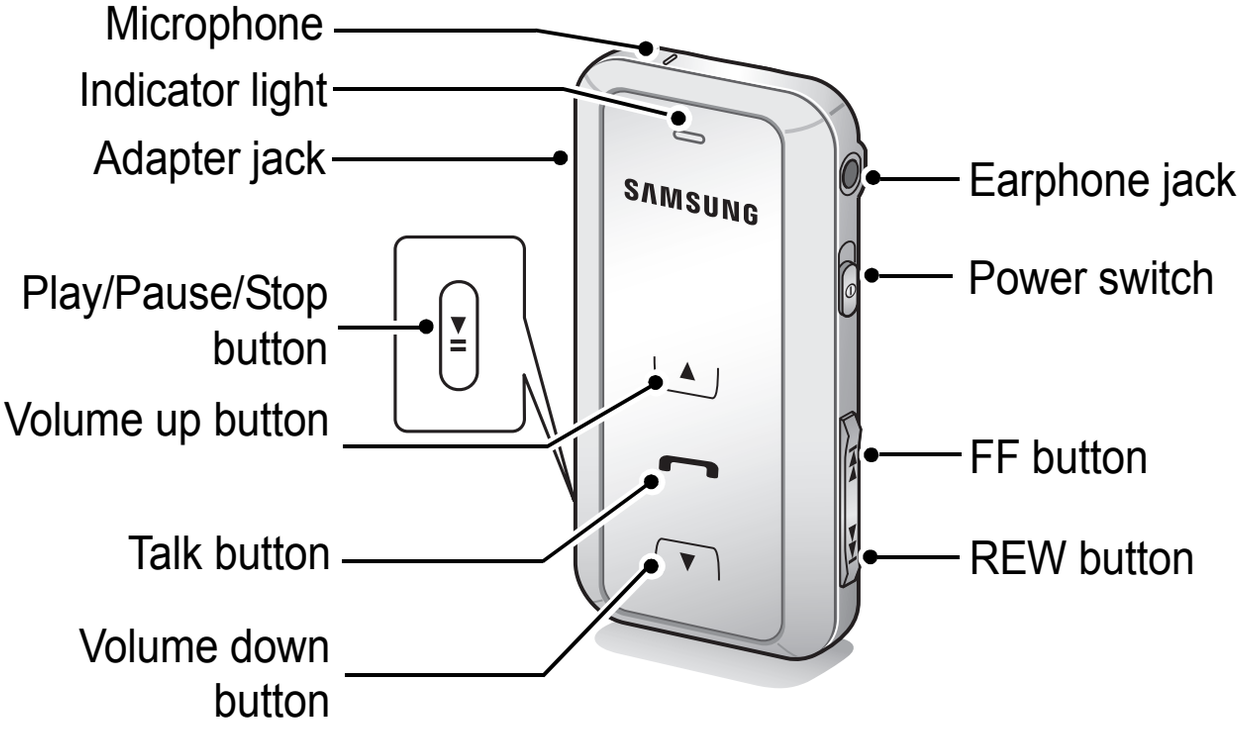

Make sure you have the following items with your headset : Travel adapter, User's guide, Earphone, Necklace.
The items supplied with your headset may vary depending on your region.

Button functions

Talk button

- Press to make or answer a call.
- Press to end a call.

Play/Pause/Stop button

- Press to launch the music player.
- Press to begin or pause playback.
- Press and hold to stop playback.

▲/▼ Volume control buttons

- Press to adjust the volume.

REW button

- Press to skip backward.
- Press and hold to scan backward in a file.

FF button

- Press to skip forward.
- Press and hold to scan forward in a file.

Power switch

- Slide the switch to turn the headset on or off.

Charging the headset

This headset has a rechargeable internal battery which is non-removable. Ensure that you fully charge the battery before using the headset for the first time.

1 Put the travel adapter into the adapter jack and into a power outlet.

The indicator light turns on red.

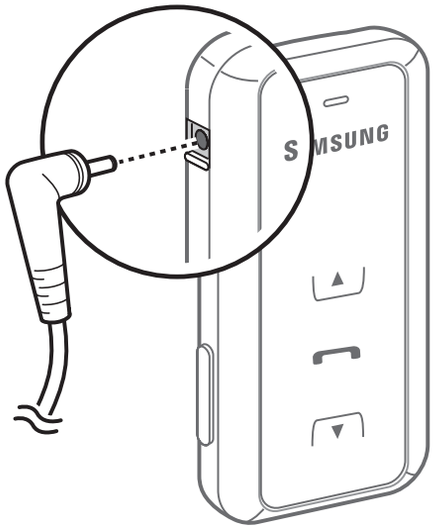

2 Disconnect the travel adapter from the power outlet and the headset when the indicator light changes to blue.

- Use only a Samsung-approved travel adapter. Unauthorised adapters may cause an explosion or damage to the headset.
- The battery will gradually wear out while charging or discharging because it is a consumable part.
- When a call comes in while charging, disconnect your headset from the travel adapter and answer the call.

When the battery charge gets low

A warning sound beeps and the indicator light flashes red. If you are on a call, transfer the call from the headset to the phone before the headset automatically turns off.

Wearing on the headset

Plug the supplied earphone into the headset and put the earphone in your ear. Ensure to put the correct (Left, Right) earpiece on each ear. You can connect the supplied necklace. Also, you can attach the headset to your clothes.

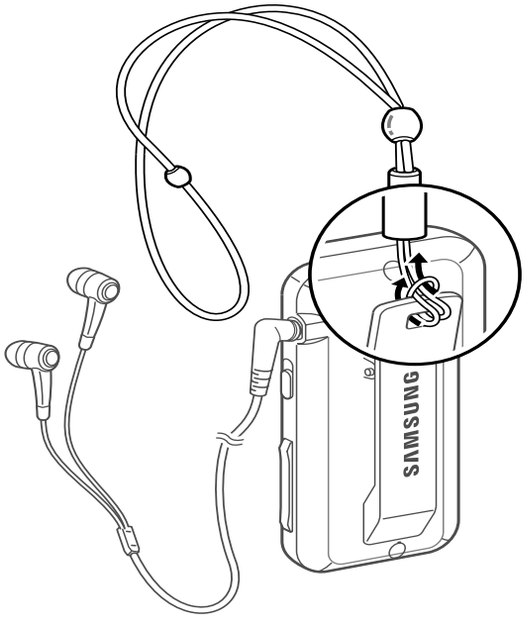

Using your headset

This section explains how to turn the headset on, pair with the phone, and use various functions.

- Activated functions may differ depending on the type of phone.
- Some devices, especially those that are not tested or approved by Bluetooth SIG, may be incompatible with your headset.

Turning the headset on or off

- Slide the power switch to turn the headset on. The indicator light sequentially flashes blue, red, purple 2 times.
- Slide the power switch to turn the headset off.

Pairing with your Bluetooth phone

Pairing will create a unique and encrypted wireless link between two Bluetooth enabled devices, such as a Bluetooth phone and a Bluetooth headset. To use the headset with other Bluetooth devices, both devices must be paired. When trying to pair the two devices, keep the headset and the phone reasonably close together.

1 Enter Pairing mode.

- Slide the power switch with pressing and holding [ ] to turn the headset on. The indicator light turns on blue and stays lit after flashing blue, red, and purple twice.
- If you turn the headset on for the first time, it proceeds into Pairing mode immediately.

2 Search for and connect with your phone according to your phone user's guide. (Bluetooth PIN: 0000, 4 zeros).

☑ When the headset and the phone are paired, press [ ] to reconnect via the previously connected Headset Profile or Hands-Free Profile, or press [►II] to reconnect via the Advanced Audio Distribution Profile.

Using call functions

When you make a call in noisy environments, ensure that the microphone is close to your mouth.

Making a call

Redialling the last number

Press [ ] to redial the last number.

For some phones, pressing the key opens the call log list. Press [▲] or [▼] to scroll through the list, and then press [ ] to dial the selected number.

Dialling a number by voice

Press and hold [ ] to dial a number by voice, and say a name.

Answering a call

Press [ ] to answer a call when you hear incoming call tones.

Ending a call

Press [ ] to end a call.

Rejecting a call

Press and hold [ ] to reject a call when a call comes in.

Using options during a call

You can use the following functions to control your call during a call.

Adjusting the volume

Press [▲] or [▼] to adjust the volume.

Muting the microphone

Press and hold [▲] or [▼] to turn the microphone off so that the person with whom you are speaking cannot hear you. Press and hold [▲] or [▼] again to turn the microphone back on.

Transferring a call from the phone to the headset

Press [ ] to transfer a call from the phone to the headset.

Placing a call on hold

Press and hold [ ] to place the current call on hold.

Answering a second call

Press and hold [ ] to answer a second call when you hear call waiting tones. The first call is placed on hold.

Press [ ] to answer a second call when you hear call waiting tones. The first call is ended.

To switch between the current call and the held call, press and hold [ ].

Using music control functions

Listening to music

1 Press [►II].

2 If your phone asks whether to listen to music via the headset, select **Yes** or **OK**.

The music player launches and sound output switches to the headset.

☑ Depend on the type of phone, the headset may read MP3 files only. Ensure that you have the correct file format (*.mp3).

Pausing and resuming playback

1 Press [►II] to pause playback.

2 Press [►II] to resume playback.

Stopping playback

Press and hold [►II] to stop playback.

Listening to the previous or next file

Press [⏮] to skip backward or [⏭] to skip forward.

Rewinding or fast forwarding

Press and hold [⏮] to scan backward or [⏭] to scan forward in a file.

Adjusting the volume

Press [▲] or [▼] to adjust the volume.

Answering a call while listening to music

When a call comes in while listening to music, your headset will alert you so that you can answer the call.

1. When the headset sounds incoming call tones and the indicator light flashes blue twice, press [ ]. The music stops and you are connected with the caller.
2. When you have finished the conversation, press [ ].
3. Press [⏯] to begin playback again.

   Your phone may automatically begin playback after a call.

Connecting the headset with other devices

You can connect your headset to the phone and another Bluetooth device that plays music files at the same time.

1 Pair the headset with a phone. See page 7.

2 If successful, turn the headset off.

3 Slide the power switch with pressing and holding [ ] to turn the headset on. The indicator light turns on blue after flashing blue, red, and purple twice.

4 Search for and connect with the device you want according to the device user's guide.

5 Press [ ] to connect with the paired phone.

6 When the phone and the device are successfully connected with the headset, you can make or answer a call while you are listening to music.

Appendix

Frequently asked questions

Will my headset work with laptops, PCs, and PDAs?	Your headset will work with devices that support your headset's Bluetooth version and profiles. For specifications, see page 18.
Will anything cause interference with my conversation when I am using my headset?	Appliances such as cordless phones and wireless networking equipment may cause interference with your conversation, usually adding a crackling noise. To reduce any interference, keep the headset away from other devices that use or produce radio waves.
Will my headset interfere with my car's electronics, radio, or computer?	Your headset produces significantly less power than a typical mobile phone. It also only emits signals that are in compliance with the international Bluetooth standard. Therefore, you should not expect any interference with standard consumer-grade electronics equipment.

Can other Bluetooth phone users hear my conversation?	When you pair your headset to your Bluetooth phone, you are creating a private link between only these two Bluetooth devices. The wireless Bluetooth technology used in your headset is not easily monitored by third parties because Bluetooth wireless signals are significantly lower in radio frequency power than those produced by a typical mobile phone.
The sound is echoing while talking.	Adjust the speaker volume, or move to another area and try again.
Music files are not playing.	Ensure that your music files are compatible with the device you are using.
How do I take care of my headset?	Wipe it with a soft dry cloth.
The headset does not fully charge.	The headset and the travel adapter may not have been connected properly. Separate the headset from the travel adapter, reconnect, and charge the headset.

Warranty and parts replacement

Samsung warrants this product as free of defects in material, design and workmanship for the period of one year from the original date of purchase.*

If during the period of warranty this product proves defective under normal use and service you should return the product to the retailer from whom it was originally purchased or qualified service centre. The liability of Samsung and its appointed maintenance company is limited to the cost of repair and/or replacement of the unit under warranty.

- The warranty is limited to the original purchaser
- A copy of your receipt or other proof of purchase is required for a proper warranty service
- The warranty is void if the serial number, date code label or product label is removed, or if the product has been subject to physical abuse, improper installation, modification, or repair by unauthorised third parties
- Specifically exempt from any warranty are limited-life consumable components such as batteries and other accessories
- Samsung will not assume any responsibility for any loss or damage incurred in shipping. All repair work on Samsung products by unauthorised third parties voids any warranty

---

* Depending on your country, the length of warranty may vary.

Correct disposal of this product

(Waste Electrical & Electronic Equipment)

This marking shown on the product or its literature, indicates that it should not be disposed with other household wastes at the end of its working life.

To prevent possible harm to the environment or human health from uncontrolled waste disposal, please separate this from other types of wastes and recycle it responsibly to promote the sustainable reuse of material resources.

Household users should contact either the retailer where they purchased this product, or their local government office, for details of where and how they can take this item for environmentally safe recycling.

Business users should contact their supplier and check the terms and conditions of the purchase contract. This product should not be mixed with other commercial wastes for disposal.

Specifications

Item	Specifications and description
Bluetooth Version	2.0
Support Profile	Headset Profile, Hands-Free Profile, Advanced Audio Distribution Profile, Audio/ Video Remote Control Profile
Operating range	Up to 30 feet (10 metres)
Standby time	Up to 170 hours*
Talk time	Up to 8.5 hours*
Play time	Up to 8.5 hours*
Charging time	Approximately 3 hours*

* Depending on the phone type and usage, the actual time may vary.

目录

入门

耳机简图 21
按钮功能 22
耳机充电 23
戴上耳机 24

使用耳机

打开或关闭耳机 25
对接蓝牙手机 25
使用通话功能 26
使用音乐控制功能 29
在收听音乐时接听电话 30
连接耳机与其它设备 31

附录

常见问题 32
保修和更换零件 34
正确处理本产品 35
规格 36
产品中有毒有害物质或元素名称及其含量 37

请花时间通读本使用说明书，之后再开始使用 SBH650 蓝牙耳机。

Bluetooth® 是世界各地蓝牙 SIG 公司的注册商标 - 蓝牙 QD ID:B014028

在 www.bluetooth.com 上提供更详细的蓝牙信息。

安全注意事项

- 不要以任何理由拆卸或改装耳机。拆卸或改装耳机可能导致耳机发生故障或变得易燃。请将耳机拿到经授权的服务中心进行修理或更换电池。
- 开车时使用耳机，请遵守所在国家或所在地区的规定。
- 避免在发热的车辆中或在阳光直射等高温 （50° C/122° F 以上）下存放耳机。在高温下存放可能损坏性能并降低电池使用寿命）。
- 不要让耳机或随耳机提供的任何附件接触雨水或其它液体。

长时间以非常高的音量用耳机收听可能会损坏您的听力。

入门

本章说明如何使用蓝牙耳机。

耳机简图

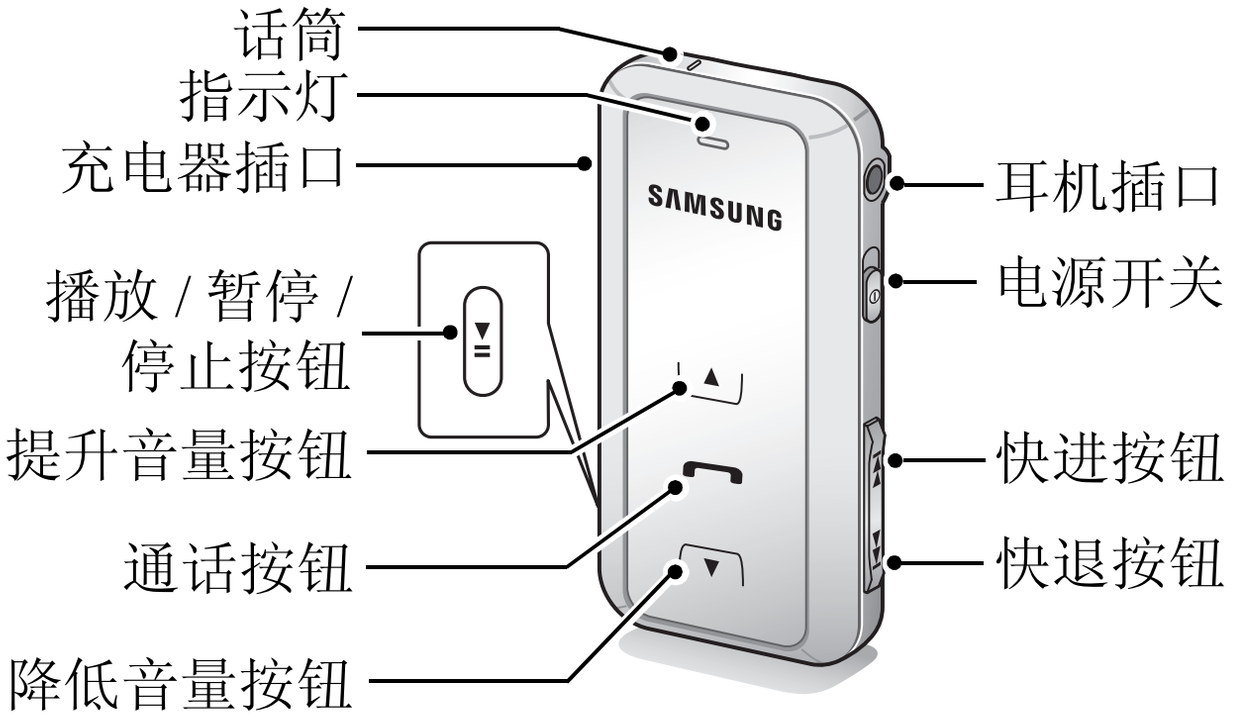

确认随耳机配有下列物品：旅行充电器、使用说明书、耳机、脖链。随耳机提供的物品可能依据您所在地区的不同而不同。

按钮功能

通话按钮

- 按下可拨打或接听电话。
- 按下可结束通话。

播放 / 暂停 / 停止按钮

- 按下可启动音乐播放器。
- 按下可暂停或继续播放。
- 按住可停止播放。

▲/▼ 音量控制按钮

- 按下可调节音量。

快退按钮

- 按下此按钮返回上一首乐曲或重新开始播放。
- 按住在文件中快退。

快进按钮

- 按下此按钮跳到下一首乐曲。
- 按住在文件中快进。

电源开关

- 滑动开关打开或关闭耳机。

耳机充电

耳机配有不可拆卸内部充电电池。在首次使用耳机之前，请务必给电池充足电。

1 将充电器插入耳机上的插口并使充电器插入标准电源插座。

红色指示灯照亮。

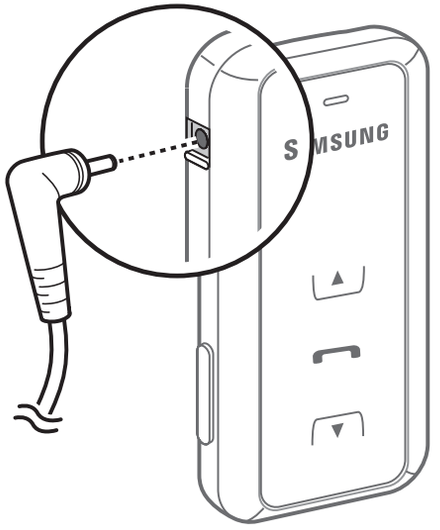

2 当电池充足电时，指示灯变蓝。从标准电源插座上断开充电器。

- 只使用三星认可的充电器。不认可的充电器可能导致爆炸或损坏耳机。
- 因为电池是消耗件，所以如果重复充电 / 放电，电池会逐渐用坏。
- 当充电过程中有来电时，先将耳机断开充电器，然后接听来电。

当电池电量下降时

发出报警声，并且红色指示灯闪闪发光。如果正在通话，请在耳机自动关闭前，将通话从耳机切换到手机。

戴上耳机

将耳机戴在耳朵上。务必在各耳朵上正确戴上（左、右）耳机。你可以连接脖链，也可以夹在衣服上。

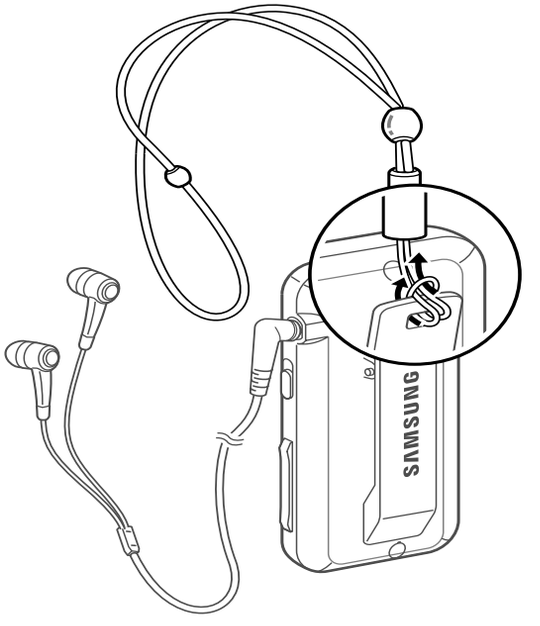

使用耳机

本章说明如何打开耳机、对接到手机和使用各种功能。

- 启用的功能可能随手机类型的不同而异。
- 一些设备，尤其是那些没有经蓝牙 SIG 测试或认可的，可能会与你的耳机不兼容。

打开或关闭耳机

- 滑动电源开关 1，打开耳机，指示灯依次闪烁发出蓝光、红光和紫光两次。
- 滑动电源开关 1，关闭耳机。

对接蓝牙手机

对接会在两个具有蓝牙功能的设备之间创建独一无二的加密无线链接，如蓝牙手机和蓝牙耳机。如欲与其它蓝牙设备一起使用耳机，两台设备必须对接。当设法对接两台设备时，让耳机和手机适当靠近。

1 进入对接模式。

- 滑动电源开关 并按住 [ ]，即可打开耳机。指示灯依次闪烁发出蓝光、红光和紫光两次后变蓝。
- 如果为首次打开耳机，将会很快进入对接模式。

2 依据手机的使用说明书在手机上查找耳机。（PIN 码 "0000"，4 个零）

☑ 当手机和耳机对接成功后，按下 [ ] 可通过免提操作设定将耳机重新连接到手机上，或按下 [►II] 可通过高级音频分布操作设定将耳机重新连接到手机上。

使用通话功能

当你在一个比较吵闹的环境中时，确保话筒靠近嘴部。

拨打电话

重拨最后联系的号码

按下 [ ]，拨打最后联系的号码。

对于一些手机，按下该键，可打开通话记录目录。然后按下 [▲] 或 [▼] 即可滚动目录，然后按下 [ ] 拨打选定的号码。

通过语音拨号

按住 [ ]，可进行语音拨号，并对话筒说出名字。

接听电话

当打来电话时，按下 [ ] 接听来电。

结束通话

当结束通话时，按下 [ ]。

拒接电话

有来电时，按住 [ ] 拒接来电。

使用通话中选项

在通话过程中，可以使用下列功能控制通话。

调节音量

在通话时按下 [▲] 或 [▼]，可调节听筒音量。

关闭话筒

按住 [▲] 或 [▼]，可关闭话筒，通话对方就听不到您的声音了。再次按住 [▲] 或 [▼]，可重新打开话筒。

将通话从手机切换到耳机

按下 [ ]，可将通话从手机切换到耳机。

通话保持

按住 [ ]，可保持当前通话。

接听第二个来电

在听到呼叫等待提示音时，按住 [ ]，可接听第二个电话。保持第一个电话。

接听第二个电话，结束第一个电话时，按下 [ ]。

如欲切换当前通话和等待通话时，按住 [ ]。

使用音乐控制功能

收听音乐

1 按下 [►II]。

2 对于一些手机，手机可能询问您是否要通过耳机收听音乐。选择**是**或**确认**确认信息。

音乐播放器启动，并且声音切换到耳机输出。

☑ 耳机有可能只读取 MP3 文件，这取决于手机的类型。必须保证音乐文件有正确的文件格式 （*.mp3）。

暂停和继续播放音乐

1 按下 [►II]，可暂停播放。

2 按下 [►II]，可继续播放。

停止播放音乐

按住 [►II] 可停止播放音乐。

收听上一首 / 下一首乐曲

按下 [⏮]，可移到上一首乐曲或重新开始播放。按下 [⏭]，可移到下一首乐曲。

快退 / 快进

在播放音乐时按住 [⏮] 或 [⏭] 可在文件中快退或快进。

调节音量

按下 [▲] 或 [▼]，可调节音量。

在收听音乐时接听电话

在播放音乐的过程中来电时，手机会提示您，您可以接听电话。

1 当耳机发出来电铃声并且蓝色指示灯闪烁两次时，按下 [📞]。停止播放音乐并且接通电话。

2 当通话结束时，按下 [📞]。

3 按下 [⏯]，可再次开始播放音乐。

你的手机在通话结束后可能自动开始播放。

连接耳机与其它设备

你可以同时将耳机连接到播放音乐文件的手机和其他蓝牙设备上。

1 将耳机与手机对接。见 25 页。

2 如果成功，关闭耳机。

3 滑动电源开关 并按住 [ ]，即可打开耳机。指示灯依次闪烁发出蓝光、红光和紫光两次后，蓝色指示灯保持照亮。

4 依据设备的使用说明书查找并对接设备。

5 按下 [ ]，可连接对接的手机。

6 当手机和设备与耳机成功连接后，即可一边听音乐，一边拨打或接听电话。

附录

常见问题

耳机可用于笔记本电脑、台式计算机和 PDA 吗？	你的耳机所对接的设备取决于你所使用的耳机蓝牙版本和功能。所示规格，参看 36 页。
在使用耳机时，什么设备会干扰通话？	无绳电话和无线联网设备等电器可能会干扰通话，通常会发出噼啪声。为了减少干扰，让耳机远离使用或产生无线电波的其它设备。
耳机会干扰车上的电子设备、收音机或计算机吗？	你的耳机功率远小于普通手机。而且，耳机只发出符合国际蓝牙标准的信号。因此，您不必担心会干扰标准消费品级的电子设备。

其他蓝牙手机用户可以听到我的通话吗？	当将耳机与蓝牙手机对接时，仅在这两个蓝牙设备之间建立保密链接。因为在无线电频率功率方面，蓝牙无线信号远低于普通手机产生的信号，所以第三方不易监控耳机中采用的无线蓝牙技术。
通话时有回声。	调节通话音量，或移到另一个区域再试。
未播放音乐文件。	取决于你所播放的音乐格式。请检查音乐文件是否与所用设备兼容。
如何保养耳机？	用软干布擦拭耳机。
耳机未充足电。	耳机和旅行充电器可能未接好。分开耳机与旅行充电器，然后重新连接并给耳机充电。

保修和更换零件

三星保证在自原始购买日期起一年内本产品没有材料、设计和工艺缺陷。*

如果在保修期内，在正常使用和保养的情况下，本产品出现缺陷，您应将本产品退回给最初出售本产品的零售商或具备资格的服务中心。三星及其委托的服务中心的责任仅限于负责修理费和 / 或更换保修的装置。

- 仅限于对最初的购买方提供担保。
- 需要提供收据的副本或其它购买证明，才可获得合适的保修服务。
- 如果除去了系列号、日期代码标签或产品标签，或者如果本产品受到了实物滥用、不适当的安装、改造或由未获得授权的第三方修理，则保修无效。
- 具体地说，不予保修的物品为使用寿命有限的消耗品，如电池和其它附件。
- 对于在装运过程中造成的任何损失或损坏，三星概不负责。如果由未获得授权的第三方修理三星产品，则不予保修。

---

* 保修时间长短可能有所不同，这取决于您所在的国家。

正确处理本产品

（废弃电气和电子设备）

本产品或其参考资料上所示本标志表明在本产品到达其使用寿命时不应与其它家庭废物一起处理。

为了防止因废物处理不受控制而可能使环境或人身健康受到损害，请将本产品与其它类型的废物分开，并负责任地回收本产品，以促进可持续地重复利用材料资源。

家庭用户应与出售本产品的零售商或当地政府机关联系，了解在哪里如何交出本产品进行环保回收。

企业用户应与其供应商联系并检查采购合同的条款和条件。本产品不应与其它商业废品混在一起处理。

规格

项目	规格和说明
蓝牙版本	2.0
所支持设定	耳机设定、免提设定、高级音频分区设定、音频 / 视频远程控制设定
工作范围	达 30 英尺 （10 米）
最长待机时间	达 170 小时 *
最长通话时间	达 8.5 小时*
最长播放时间	达 8.5 小时 *
充电时间	大约 3 小时 *

* 实际时间可能随手机类型和用途而异。

产品中有毒有害物质或元素名称及其含量

部件名称	有毒有害物质或元素					
	铅（Pb）	汞（Hg）	镉（Cd）	六价铬（Cr^{6+}）	多溴联苯（PBB）	多溴二苯醚（PBDE）
印刷电路板组件	×	○	○	○	○	○
塑料	○	○	○	○	○	○
金属	×	○	○	○	○	○

○：表示该有毒有害物质在该部件所有均质材料中的含量均在 SJ/T11363-2006 标准规定的限量要求以下。

×：表示该有毒有害物质至少在该部件的某一均质材料中的含量超出 SJ/T11363-2006 标准规定的限量要求。

本表格提供的信息是基于供应商提供的数据及三星公司的检测结果。在当前技术水平下，所有有毒有害物质或元素的使用控制到了最底线。三星公司会继续努力通过改进技术来减少这些物质和元素的使用。

本产品的“环保使用期限”为 20 年，其标识如左图所示。电池等可更换部件的环保使用期限可能与产品的环保使用期限不同。只有在本使用说明书所述的正常情况下使用本产品时，“环保使用期限”才有效。

目錄

開始使用

耳機概覽 41
按鈕功能 42
耳機充電 43
配戴耳機 44

使用耳機

開關耳機 45
與藍牙手機配接 45
使用通話功能 46
使用音樂控制功能 49
聽音樂時接聽來電 50
將耳機連接到其他裝置 51

附錄

常見問題 52
保用及更換零件 54
正確棄置本產品 55
規格 56

使用 SBH650 藍牙耳機前，請仔細閱讀本用户手册。

Bluetooth® 是 Bluetooth SIG, Inc. 的全球註册商標 - 藍牙 QD ID ：B014028

如需有關藍牙的更多資料，請瀏覽 www.bluetooth.com。

安全注意事項

- 切勿因任何原因拆開或改裝耳機。否則可能引致耳機故障或著火。請將耳機送到認可的維修中心維修或更換電池。
- 若在駕車時使用耳機，請遵守所在國家或地區的法例。
- 避免將耳機存放於高溫環境（50° C/ 122° F 以上），例如熱烘的車廂或陽光直射之下，因爲這樣會損壞耳機效能並縮短電池壽命。
- 切勿讓耳機或任何零件接觸雨水或其他液體。

若音量過大，長時間使用耳機可能會損害您的聽覺。

開始使用

本節說明正確使用藍牙耳機的注意事項。

耳機概覽

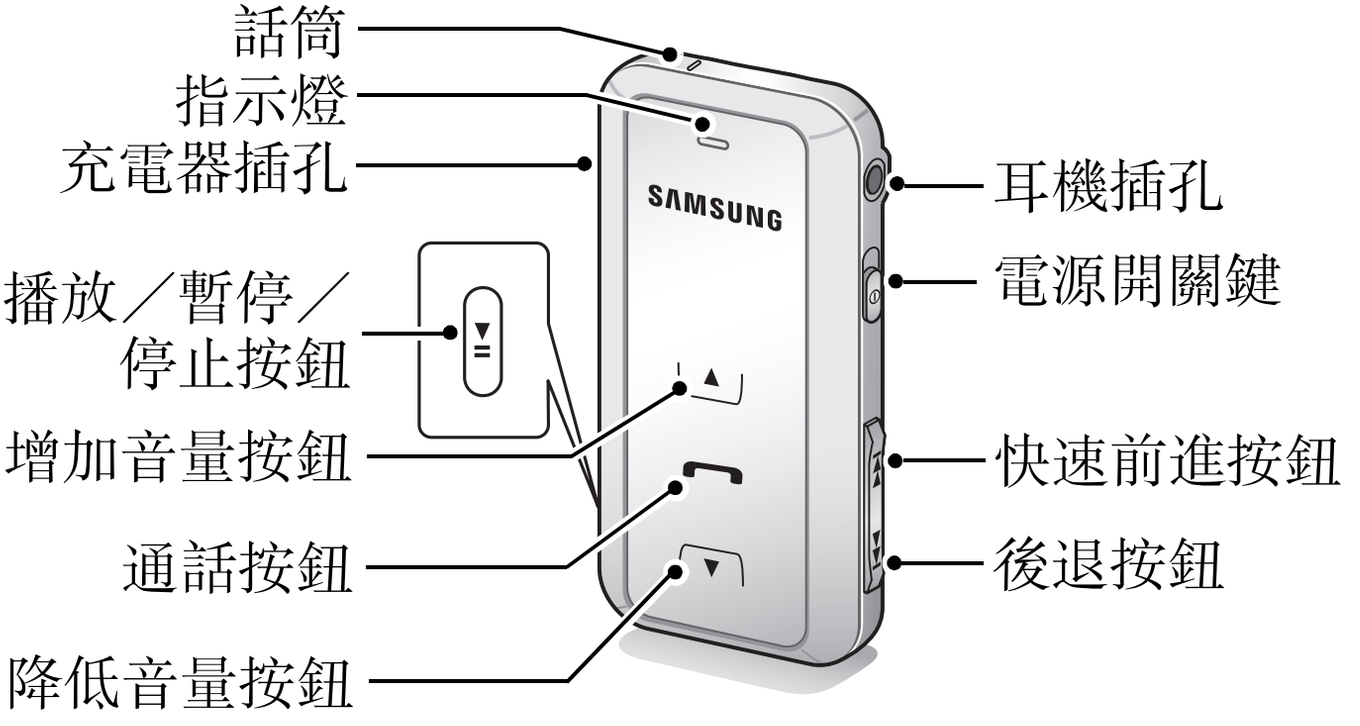

☑ 請確保耳機配備以下物件：旅行充電器、用户手册、耳機、手機掛頸繩。
視乎您所在的地區，耳機附件可能有所不同。

按鈕功能

通話按鈕

- 按一下可撥出或接聽電話。
- 按一下可結束通話。

播放／暫停／停止按鈕

- 按一下可啓動音樂播放器。
- 按一下可開始或暫停播放。
- 按住可停止播放。

▲/▼ 音量控制按鈕

- 按一下可調校音量。

後退按鈕

- 按一下可後退。
- 按住時可在檔案中向後掃描。

快進按鈕

- 按一下可前進。
- 按住可以在檔案中向前掃描。

電源開關鍵

- 滑動電源開關鍵可開關耳機。

耳機充電

本耳機內置不可拆除的充電式電池。首次使用耳機前，請確保電池充滿電。

1 將旅行充電器插入充電器插孔和電源插座。

紅色指示燈亮起。

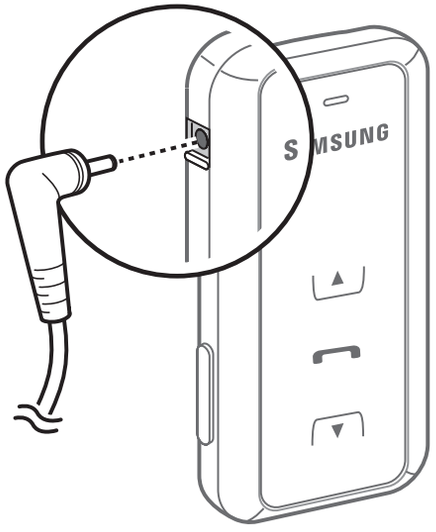

2 當指示燈變爲藍色時，將旅行充電器從電源插座和耳機中拔出。

- 請只使用三星認可的旅行充電器。未經許可的充電器可能會引起爆炸或損壞耳機。
- 電池是消耗件，因此會因充電或放電而逐漸耗損。
- 充電時如有來電，從旅行充電器上拔出耳機即可接聽電話。

當電池電量不足時

耳機會發出警告音，而且紅色指示燈閃爍。如果您正在通話，請在耳機自動關閉前將通話從耳機切換到手機。

配戴耳機

將隨附耳機插入手機，然後將耳機配戴於耳朵上。確保兩邊（左、右）聽筒配戴正確。您可以連接隨附的手機掛頸繩。您亦可將耳機繫於您的衣服上。

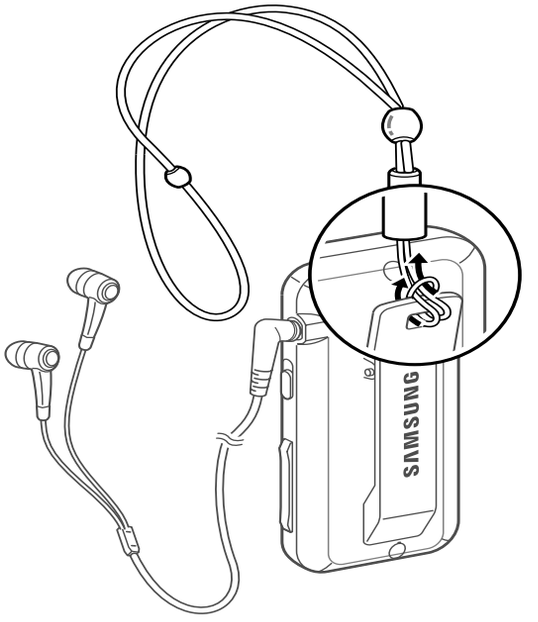

使用耳機

本節說明如何打開耳機、配接手機以及使用各種功能。

- 視乎手機類型，啓用的功能可能會有所不同。
- 某些裝置，特別是未經 Bluetooth SIG 測試或認可的裝置，可能與您的耳機不兼容。

開關耳機

- 將電源開關鍵滑到 位置，開啓耳機。指示燈依次序閃爍藍色、紅色、紫色兩次。
- 將電源開關鍵滑到 位置，關閉耳機。

與藍牙手機配接

配接過程是在兩個可使用藍牙的裝置（例如藍牙手機和藍牙耳機）之間建立獨一無二的加密無線連接。要將耳機配合其他藍牙裝置使用，則須先將兩個裝置配接。嘗試將兩裝置配接時，應將耳機與手機適當靠近。

1 進入配接模式。

- 將電源開關鍵滑到 位置，按住 [ ] 開啓耳機。指示燈變爲藍色，並在閃爍藍色、紅色和紫色兩次後持續亮起。
- 如果您是首次開啓耳機，耳機將立即進入配接模式。

2 依照手機的用户手册，搜尋並連接耳機。（藍牙 PIN 碼：0000，四個零）

☑ 耳機和手機配接時，按 [ ] 透過以前連接的耳機操作模式或免提操作模式重新連接，或者按 [►II] 透過進階音效傳輸操作模式重新連接。

使用通話功能

當您在嘈雜的環境中撥打電話時，請確保話筒靠近您的口部。

撥出電話

重撥上次的號碼

按 [ ] 重撥上次的號碼。

對於某些手機，按此鍵會打開通話記錄清單。按 [▲] 或 [▼] 捲動清單，再按 [ ] 撥打所選的號碼。

話音撥號

按住 [⌐] 可進行話音撥號，請說出名字。

接聽電話

聽到來電提示音時按 [⌐] 可接聽電話。

結束通話

按 [⌐] 結束通話。

拒絕來電

來電時，按住 [⌐] 可拒絕來電。

通話時使用選項

通話時，您可以使用以下功能控制通話。

調校音量

按 [▲] 或 [▼] 可調校音量。

話筒靜音

按住 [▲] 或 [▼] 可關閉話筒，使對方聽不到您的聲音。再次按住 [▲] 或 [▼] 重新開啓話筒。

從手機轉駁通話到耳機

按 [⌐] 將通話從手機切換到耳機。

保留通話

按住 [⌐] 可保留目前通話。

接聽第二個來電

聽到來電待接提示音時，按住 [⌐] 可接聽第二個來電。第一個電話則被保留。

聽到來電待接提示音時，按 [⌐] 可接聽第二個來電。第一個電話結束。

要在目前通話和保留通話之間切換，請按住 [⌐]。

使用音樂控制功能

聽音樂

1 按 [►II]。

2 如果手機詢問是否透過耳機聽音樂，選擇**是**或**確認**。

音樂播放器啓動，聲音輸出切換到耳機。

☑ 視乎您的手機類型，耳機可能只能讀取 MP3 檔案。請確保您的檔案格式正確 (*.mp3)。

暫停及恢復播放

1 按 [►II] 暫停播放。

2 按 [►II] 恢復播放。

停止播放

按住 [►II] 可停止播放。

聽上一個或下一個檔案

按 [I◄◄] 後退或 [►►I] 前進。

退回或快速前進

按住 [⏮] 或 [⏭] 可分別在檔案中向後或向前掃描。

調校音量

按 [▲] 或 [▼] 可調校音量。

聽音樂時接聽來電

在聆聽音樂時如有來電，耳機會提示您，以便您接聽來電。

1 當耳機發出來電提示音且藍色指示燈閃爍兩次時，按 [📞]。音樂停止，您將與來電者接通。

2 通話結束時，按 [📞]。

3 按 [⏯] 再次播放音樂。

您的手機可能會在通話結束後自動開始播放音樂。

將耳機連接到其他裝置

您可以將耳機同時連接到手機及其他播放音樂檔案的藍牙裝置。

1 將耳機與手機配接。請參閱第 45 頁。

2 如果操作成功，關閉耳機。

3 將電源開關鍵滑到 位置，按住 [ ] 開啓耳機。指示燈在閃爍藍色、紅色和紫色兩次後變爲藍色。

4 依照裝置的用户手册，搜尋並連接所需裝置。

5 按 [ ] 連接配接手機。

6 手機和裝置成功連接到耳機時，停止聽音樂後便可以撥出或接聽電話。

附錄

常見問題

耳機可以配合手提電腦、個人電腦和 PDA 使用嗎？	本耳機可以配合支援耳機藍牙版本及操作模式的裝置使用。有關規格詳情，請參閱第 56 頁。
使用耳機時，通話是否會受到干擾？	有些裝置，例如無線電話和無線網絡設備等，可能會干擾您的通話，通常是產生雜音。要減低干擾，耳機應遠離其他採用或產生無線電波的裝置。
耳機會否干擾汽車的電子裝置、無線電或電腦？	耳機產生的能量遠低於一般手機。而且它僅發出符合國際藍牙標準的訊號。因此，您不必擔心它會對標準用户級電子設備造成干擾。

其他藍牙手機用户是否可以聽到我的通話？	耳機與藍牙手機配接時，僅在這兩個藍牙裝置之間建立保密連結。耳機採用的無線藍牙技術不易被第三方監聽，因爲藍牙無線訊號的射頻能量遠低於一般手機。
通話時有回音。	調校揚聲器音量，或移至其他區域再試。
無法播放音樂檔案。	請確保您的音樂檔案與您所使用的裝置是否兼容。
如何護理耳機？	用乾軟布擦拭。
耳機未充滿電。	耳機與旅行充電器可能並未連接妥當。將耳機從旅行充電器拔出，然後重新連接，爲耳機充電。

保用及更換零件

三星保證自購買日期起一年內，本產品的材料、設計和工藝没有缺陷。*

在保用期內，若證明本產品在正常使用和服務的情況下存在缺陷，您應將本產品退回您原本購買本產品的零售商或合格維修中心。三星及其指定維修公司的責任僅限於保用範圍內的維修費用及／或產品更換。

- 保用僅適用於原購買者
- 請提供收據或其他購買證明的副本，以獲得適當的保用服務
- 如果序列號碼、日期編碼標籤或產品標籤被移除，或產品被不當使用、不當安裝、改裝或由未經授權的第三方維修，保用即告無效
- 保用範圍明確不包括壽命有限的消耗性組件（例如電池及其他配件）
- 三星對運輸過程中造成的任何損失或損壞概不負責。三星產品一經未獲授權的第三方進行任何維修，保用即告無效

---

* 視乎所在的國家，保用期可能有所不同。

正確棄置本產品

（電氣及電子設備廢物）

在產品及其手册中顯示的此標記，表示產品在使用壽命完結後，不應與其他家居廢物一同棄置。

爲防止未經管制棄置的廢物損害環境或人體健康，請將本產品與其他種類的廢物分開並妥善回收，以促進持續循環再用材料。

家庭用户應聯絡其購買本產品的零售商或當地政府部門，瞭解以環保方式安全回收本產品的途徑和細節。
商業用户應聯絡其供應商，並檢查購買合約的條款與條件。請勿將本產品與其他商業廢物混合棄置。

規格

項目	規格和描述
藍牙版本	2.0
支援操作模式	耳機操作模式、免提操作模式、進階音效傳輸操作模式、影音遙控操作模式
操作範圍	可達 30 英呎（10 米）
待機時間	可達 170 小時 *
通話時間	可達 8.5 小時*
播放時間	可達 8.5 小時 *
充電時間	約 3 小時 *

* 視乎手機類型及使用情況，實際時間可能存在差異。

MOBILE ENHANCEMENT

World Wide Web
http://www.samsungmobile.com

Printed in Korea
Code No.: GH68-19204A
08/2008. Rev. 1.0